



INSTALLATION INSTRUCTIONS

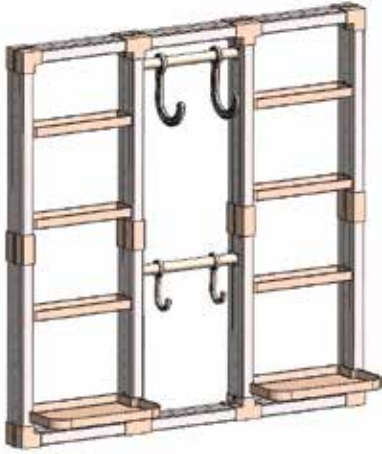


PARTS LIST

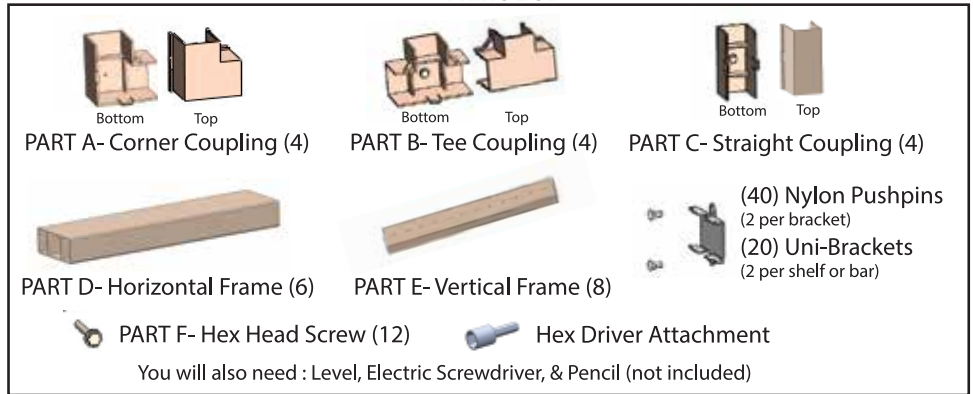

STEP 1: Determine where you want to install the VersaCaddy® Uni-Frame on the wall. The overall size is approx. 48" x 48".

STEP 2: Using stud finder, locate stud behind wall. (This step is critical as the VersaCaddy® Uni-Frame must anchor into the studs located behind the wall.)

STEP 3: Using a level and pencil, draw a vertical line along the location of the stud, and a horizontal line to indicate the where you would like the bottom left corner of the Uni-Frame to be placed.

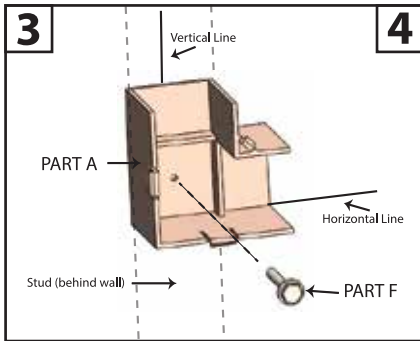


STEP 4: Begin with the **bottom** lower left Corner Coupling "PART A". Using the provided hex driver attachment, screw PART A into the wall using the hex head screw "PART F". The screw must engage and anchor into the stud.

STEP 5: Insert the Horizontal Frame "PART D" (no holes) into PART A and place along the previously drawn horizontal line. This will guide you to the placement for the Tee Coupling "PART B". Once placed, use the hex driver and screw PART B into wall using the hex screw PART F.



STEP 6: Repeat STEP 5 for the next bottom Tee Coupling PART B, then lower right bottom Corner Coupling PART A.


STEP 7: Insert the Vertical Frame "PART E" (has holes) and Straight Coupling "PART C" into the vertical slot of the lower left Corner Coupling PART A. Use the Vertical Frame PART E and a level to place the Straight Coupling PART C. Then, use the Hex Driver and a Hex Screw PART F to anchor the Straight Coupling PART C into the stud.

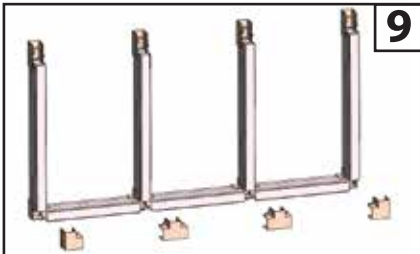


STEP 8: Repeat STEP 7 for the remaining Vertical Frames PART E and Straight Couplings PART C.

STEP 9: Insert the Horizontal Frames PART D and Vertical Frames PART E into place and secure with the Snap-Fit Top Couplings (PARTS A, B & C "top")

STEP 10: Repeat STEPS 1-9 to install the top section of the VersaCaddy® Uni-Frame. Use a level and the existing Vertical Frames to guide placement.

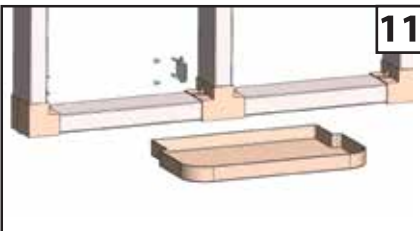

STEP 11: Install Shelves and Hooks as desired. Use the Nylon Push Pins to secure the Uni-Bracket to the Vertical Frames then slide the Shelf or Hanging Bar into the brackets.

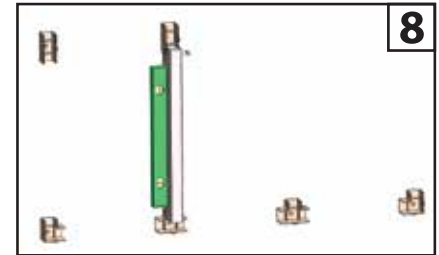

Scan here for
demo video or
search UniCaddy
on YouTube!